



E3M & E3TX

Non maintained mode
Eclairage non permanent
Bereitschaftsschaltung
Beredskapsdrift
Circuito in emergenza
Praca awaryjna

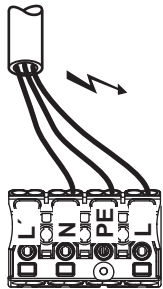


X10 AD 180

Maintained mode
Eclairage permanent
Dauerschaltung
Permanendrift
Circuito permanente
Praca ciągła

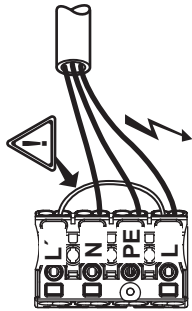

X11 AD 180

Switched maintained mode
Eclairage permanent activé
Geschaltetes Dauerlicht
Kopplatt permanente ijus
Luce permanente accesa
Pracą ciągłą przerywana

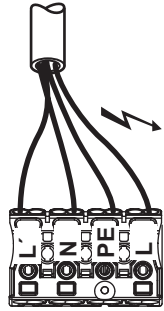


X1 AD 180




E3TX


SelfTest (local)
Auto Test (lokal)
Autotest (lokal)
Självtest (lokalt)
Autotest (locale)
Autotest (wewnętrzny
układ testujący)

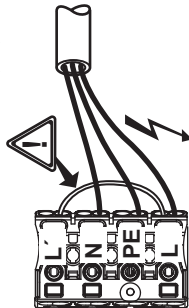

X1 AD 180

 


Addressable Test (central)
Test adressable (central)
Adressierbarer Test (zentral)
Adresserbar test (central)
Test indirizzamento (centrale)
Test adresowalny (zdalny układ
testujący)

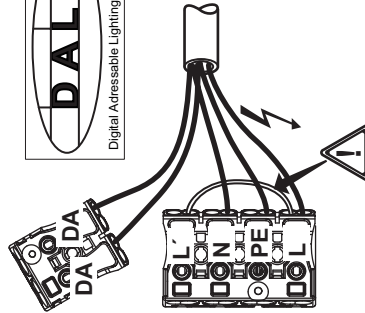

X1 ACD 180



THORN

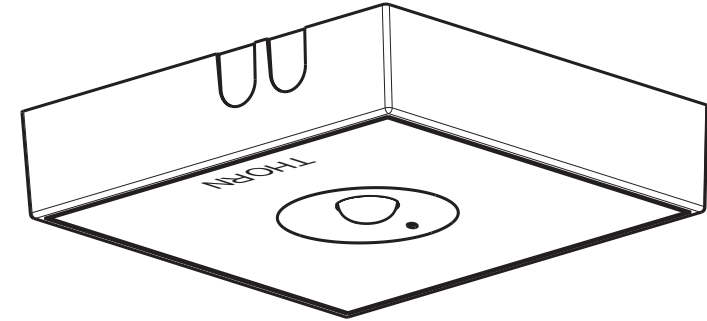

VOYAGER LED AREA/SPOT MCE IP40

(CE) Montážni návod
(DE) Montageanleitung
(DK) Monteringsvejledning
(EE) Paigaldusjuhend
(FI) Asennusohje
(FR) Notice de montage
(HU) Szerelési útmutató
(IT) Istruzioni di montaggio

(LT) Montavimo Instrukcijos
(LV) Instalācijas instrukcija
(NO) Monteringsanvisning
(PL) Instrukcja montażu
(RU) Инструкция по монтажу
(SE) Installationsanvisning
(UK) Installation Instructions

